


NEPTUM Bi-Fold Doors  
Installation with two side panels  
REVERSIBLE

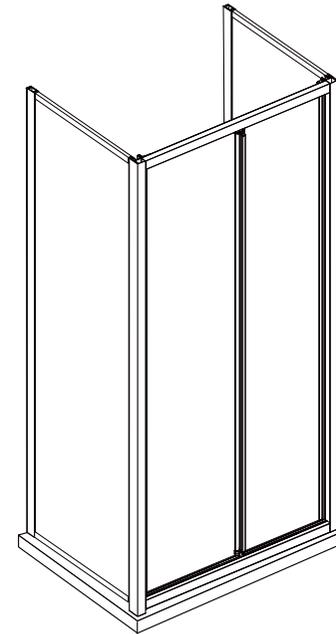

**IPERCERAMICA**  
wellness

This product has been imported by:  
BayKer Italia S.p.A. - via Ghiarola Nuova, 85/87-41042 Fiorano Modenese (Modena)-ITALY



## General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

### Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.


Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

## Aftercare instructions

After use, your shower enclosure should be cleaned with soap and warm water only. This is particularly important in hard water areas where insoluble lime salts may be deposited and allowed to build up. For cleaning purposes, please use soap and warm water or vinegar and warm water. **DO NOT** use abrasive cleaners. **DO NOT** use bleach based products. Many household cleaners contain abrasive and chemical substances and should not be used for cleaning plated or plastic fittings. Please keep these instructions for aftercare and customer service details.




## Tools Required

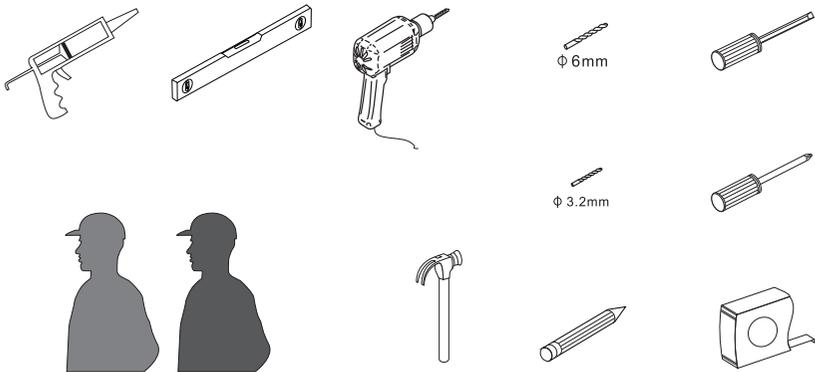

This product is heavy and may require two people to install.



## Step 5

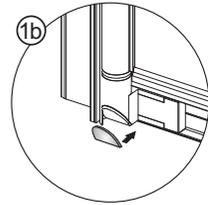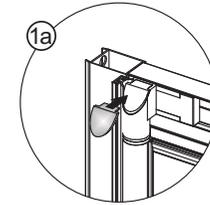
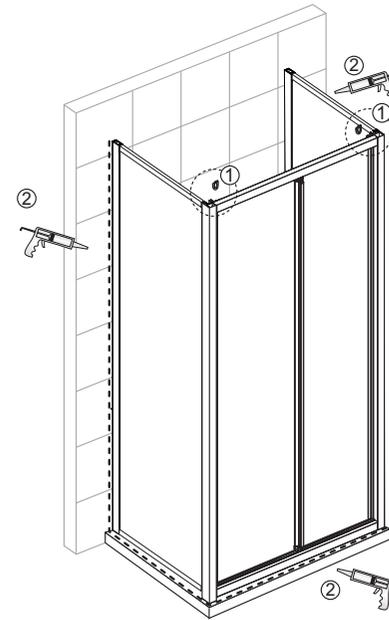


View form inside





Allow 24 hours for silicone to dry before use.

### Step 3

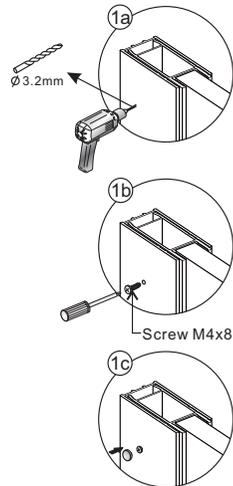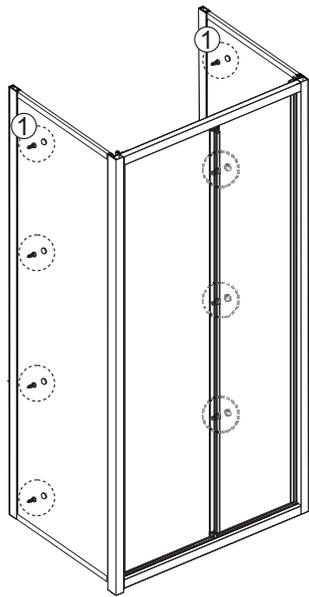

View from inside

### Step 4

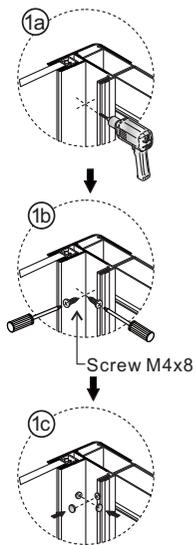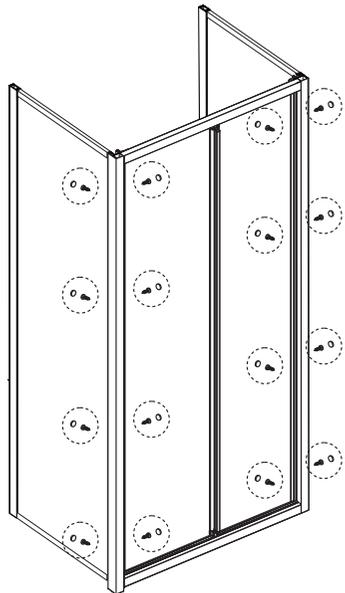


View form inside

### ◆ Box Contents

[1] 1xInstallation Instruction.	➔	
[2] 8xWall Plugs. 8xScrews M4x35. 24xScrews M4x8. 24xScrew Cover Caps.	➔	
[3] 2xCorner PostS. 2xPosts .	➔	
[4] 2xSide Panels.	➔	
[5] 1xDoor Panel.	➔	

## ◆ Assembly Drawing




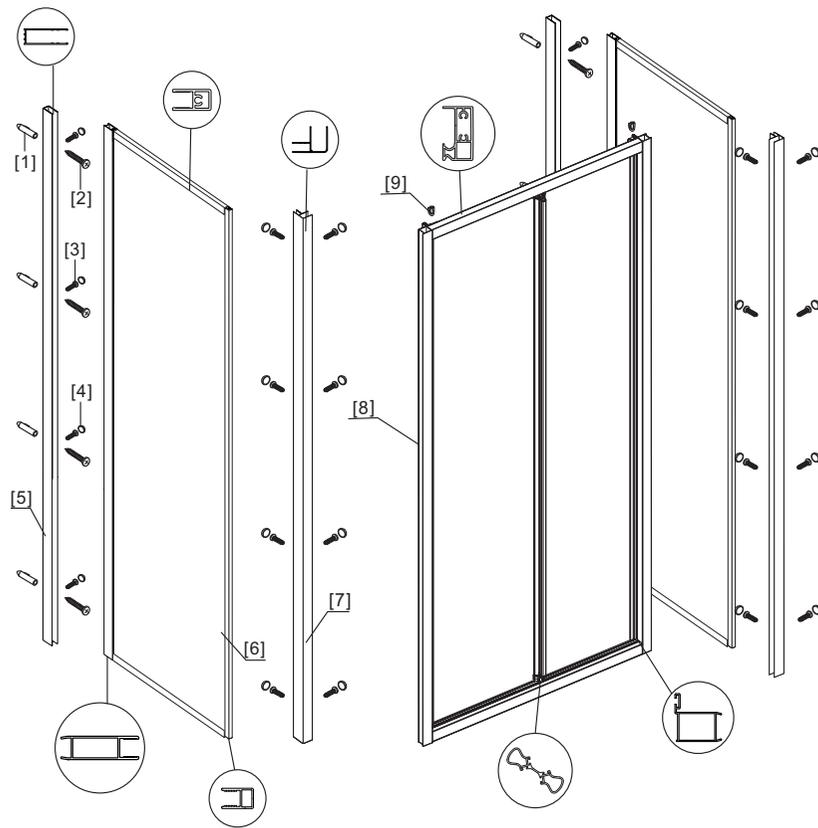


- [1] 8xWall Plugs
- [2] 8xScrews M4x35
- [3] 24xScrews M4x8
- [4] 24xScrew Cover Caps

- [5] 2xWall Posts
- [6] 2xSide Panels
- [7] 2xPosts
- [8] 1xDoor Panel
- [9] 4xProfiles





## ◆ Installation Steps

### Step 1

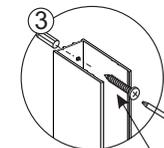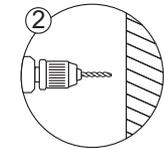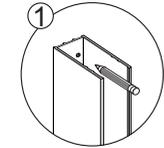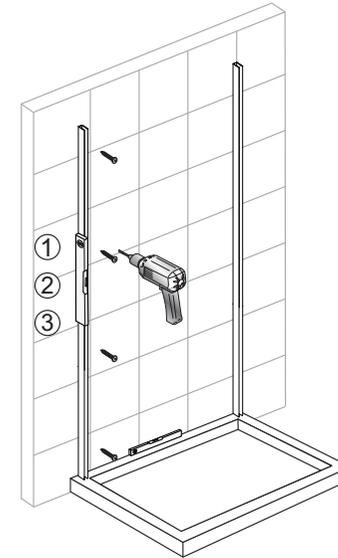

Screw M4x35

### Step 2

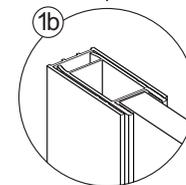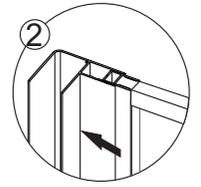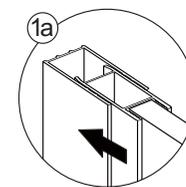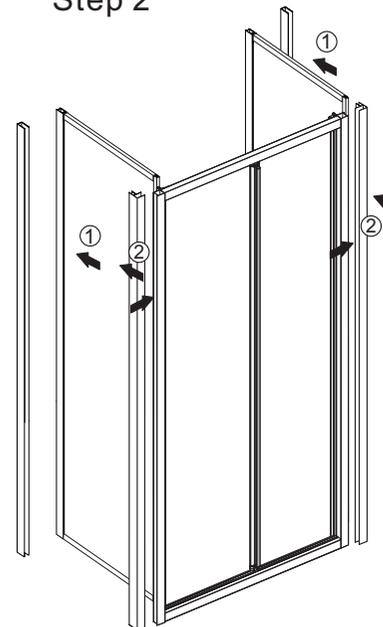

⚠ Ensure wall profiles are plumb. Adjust enclosure to be square and level. Wall post and profile should be adjust to square the doors and Ensure open door smooth.